



Guidelines


- Maximum weight: 35lb (16kg) per bike
- Compatible with RockyMounts DriveShaft HM, HotRod, and LoBall Series bike mounts
- Not recommended for use on trailers
- Not intended for offroad use
- After loading a bicycle, shake fork side to side to ensure assembly is tight and secure

Parts Included


A: 60" VanTrack (w/ End Caps) B: M8x30 Allen Bolt

C: M8 Flat Washer D: M8 Hex Nut E: M6x18 Allen Bolt F: M6 Flat Waher

G: Track Plate

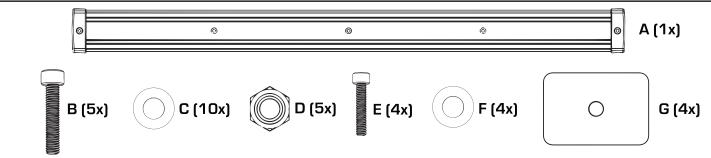


Assembly Instructions (For Van Interior: Rubber end cap may provide sufficient hold and eliminate need for drilling)

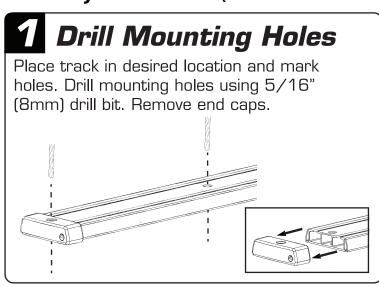



Assembly Instructions Cont.

Install End Caps Slide the end cap back onto the end of the track. Orocky**mounts**

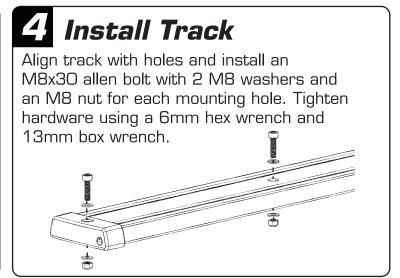

- *Bike Mounts Not Included
- * *Track Hardware Provided: M6x18 Allen Bolt (x4), M6 Flat Washer (x4), and Track Plate (x4)

Warnings

- •Remove Baby Seats, Panniers, U-Locks, or Items That Could Detach From The Bicycle
- •Check All Fasteners Before Each Use
- •Remove Bikes Before Entering Car Wash
- •Once a Year, Remove Track From Vehicle to Clean and Inspect for Damage

Limited Lifetime Warranty

At RockyMounts we offer a Limited Lifetime Warranty for products purchased after January 1, 2014 to the original owner. For details of the Warranty, guidelines, and how to make a claim please see rockymounts.com/warranty

Technical Support

Please call us at 303-402-0190 or email at ride@rockymounts.com for questions regarding use, assembly, and support