

rockymounts™ HighNoon FC Add-On

Guidelines

- Using the HighNoon Add-On reduces the max weight per bike to 45lbs (20kg) each
- Tire width 19mm road bike tires 5.0" mountain bike tires
- Wheel Diameter: 20" 29"
- Wheelbase: 33" 52" (690mm 1300mm)
- Remove Baby Seats, Panniers, U-Locks, or items that could detach from the bicycle before use
- No kick bikes, recumbents, mopeds, scooters, pennyfarthings, or tandems
- Only compatible with HighNoon 2" & HighNoon SOLO


• NOT COMPATIBLE WITH HIGHNOON 1.25" OR BOOTLEG

Parts Included

- A: Wheel tray A
- B: HighNoon Solo Spine
- C: Back stop
- D: Rear wheel cup
- E: Front wheel cup

F: Wheel strap G: Wheel strap extension H: M8 x 90mm BHCS bolt I: M8 x 85mm BHCS bolt J: M8 x16mm BHCS bolt K: M8 Flat washer L: M8 Split washer M: 5mm Allen wrench


N: M8 x 30mm flanged bolt

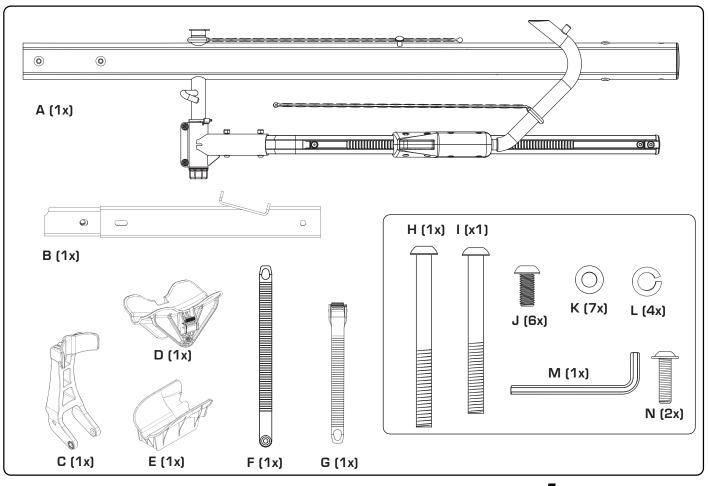

Read all warnings on last page before use.


*rocky*mounts™

Assembly Instructions

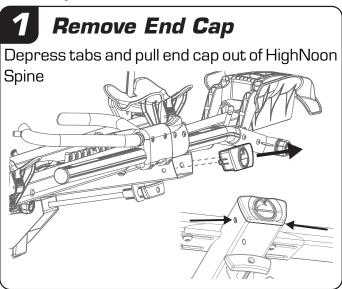


2 Install Add-On Spine

Insert add-on spine into main spine. Install two M8x16 bolts with two flat washers. Reinstall end cap into add-on spine

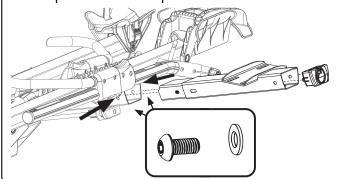


6 Install Wheel Tray

Place wheel tray on the add-on spine with the load arm facing away from vehicle. Install four M8x16 bolts with M8 washers through slots under add-on spine

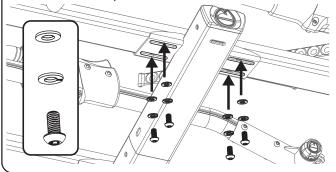

Install Front Wheel cup


Push the front wheel cup onto the tray and screw in the two M8x30 flanged screws from the underside of the tray

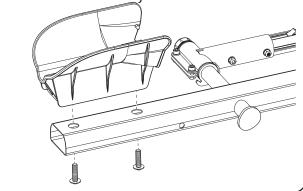



6 Install Rear Wheel Cup

Align holes on the wheel cup, tray, and wheel strap. Make sure the buckle faces away from vehicle. Install with M8x90 BHCS bolt and one M8 flat washer

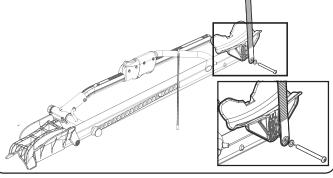


Read all warnings on last page before use. **rocky**mountS[™]

Rack Adjustability

Loosen Bolts

Trays can be adjusted side-to-side to avoid handlebar interference. Remove bikes and fold rack to stowed position. Loosen eight M8 bolts on bottom of spine

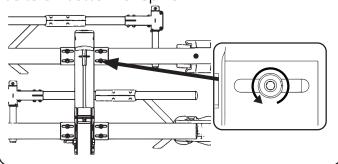


Trimming Excess Strap

1 Shorten Strap Measure and find desired strap length (X). We suggest +2 additional loops from your chosen length. Then carefully cut strap between openings **1** Occorrector (Cocorrector) **1** Occorrector) **1**

2 Adjust Trays

Slide trays as much as needed and re-tighten all eight M8 bolts

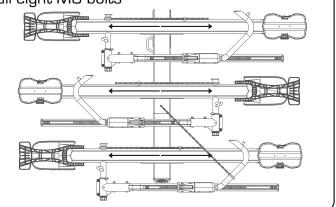

Read all warnings on last page before use.

*rocky*mounts™

Warnings

• If a hitch extension is needed, only anti-wobble hitch extensions by RockyMounts should be used with this product

- Remove Baby Seats, Panniers, U-Locks, or items that could detach from the bicycle
- Do not use bicycle covers, bicycle bras, or bicycles equipped with aero disc wheel(s)
- \bullet Not intended for off road use or with trailers, towed vehicles, 1 ton pickups, RV's, or UHV/UTVs
- \bullet Bikes and rack can partially block license plate and/or taillights. Please check and adjust accordingly
- Check the car exhaust is not pointing at the rack, bike tires, or rims. Some vehicles may require exhaust diversion to avoid damage
- Do not transport bikes with flat or leaking front tires. Front tire must be inflated for secure transport

• Hitch recievers require a minimum of Class II, III, IV rating and 1.5" (38mm) distance from hitch pin hole to end of receiver

- Locks are only deterrents for theives, RockyMounts™ Inc. Cannot be held liable for stolen bicycles
- Check All Fasteners Before Each Use
- Remove Bikes and Rack Before Entering Car Wash, hand washing rack is OK
- Once a Year, Remove From Car to Clean and Inspect for Damage

•Wheel Straps are subjected to age, wear and deterioration - It is the responsibility of the Owner/ User to evaluate and replace straps when needed.

Limited Lifetime Warranty

At RockyMounts we offer a Limited Lifetime Warranty for products purchased after January 1, 2014 to the original owner. For details of warranty, guidelines, and how to make a claim; please see rockymounts.com/warranty

Technical Support

Please call us at 303-402-0190 or email ride@rockymounts.com for questions regarding use, assembly, and support

Read all warnings on this page before use.

*rocky*mounts™